

11

- [illegible]

100

[illegible]

- [illegible]

11

| 項目    | 単位 |     | 単位換算 | 単位換算 | 単位                                     |
|-------|----|-----|------|------|----------------------------------------|
|       | 単位 | mm  |      |      |                                        |
| 単位換算表 | 5  | 125 | 3    | 30   | M14<br>M16<br>5/8 "-11<br>42mm<br>50mm |
|       | 6  | 150 | 4    | 45   |                                        |
|       |    |     | 3    | 30   |                                        |
|       | 8  | 200 | 6    | 45   |                                        |
|       |    |     | 4    | 30   |                                        |
|       | 10 | 250 | 8    | 45   |                                        |
|       |    |     | 5    | 30   |                                        |
|       | 12 | 300 | 10   | 45   |                                        |
|       |    |     | 6    | 30   |                                        |
|       |    |     |      |      |                                        |

111

**boreway®**





5/5



**Fujian Nan'an Boreway Machinery Co., Ltd.**

地址 Huahui Center 605 水头镇 泉州 福建 中国

邮编 362342

**TEL** ☎ +86 595-86990206 / ☎ + 86 18250633812

☎ +86 595-86990220

**WhatsApp** ☎ + 86-18359335376

**E** ✉ [boreway04@boreway.net](mailto:boreway04@boreway.net)