



BW-BHR4530.	45.	22.	30.	3.6. 4.5. 4.6. 4.7. 6.0. 8.0.	□□□□ □□ □□□□
BW-BHR5330.	53.	30.	30.		
BW-BHR5530.	55.	22.	30.		
BW-BHR5545.	55.	22.	45.		
BW-BHR5545.	55.	30.	45.		
BW-BHR5545.	55.	39.	45.		
BW-BHR5545.	55.	53.	45.		
BW-BHR5545.	55.	55.	45.		
BW-BHR5560.	55.	43.	60		
BW-BHR8060.	80.	55.	60		
BW-BHR5972.	59.	53.	72.		
BW-BHR6077.	60	53.	99.		
BW-BHR3307.	33.	6.	7.	□□ □□	
BW-BHR3310.	33.	6.	10.		
BW-BHR4910.	49.	6.	10.		
BW-BHR4915.	49.	6.	15.		
BW-BHR4920.	49.	6.	20.		

□□□ □□ □□ □□□□□ □ □□□□ □□ :


□□	□□□ □□		□ □□	□□□□ □□
	□□	mm		
BW-BH12514.	5.	125.	□	14.
BW-BH12514.			4.	14.
BW-BH12520.			□	20.
BW-BH12520.			4.	20.
BW-BH12530.	5.	125.	□	30.
BW-BH15014.	6.	150.	4.	14.
BW-BH12520.	6.	150.	4.	20.
BW-BH15045.	6.	150.	□	45.
BW-BH15030.			4.	30.
BW-BH20045.	8.	200.	4.	45.
BW-BH20030.			6.	30.
BW-BH25045.	10.	250.	5.	45.
BW-BH25030.			6.	30.
BW-BH30045.	12.	300.	6.	45.
BW-BH30030.			9.	30.

BW-BH35045.	14.	350.	9.	45.
BW-BH35030.			12.	30.

□□□ □□ □□ □□□ □□ □□ □□□ □□□ □□ □ □ □□□□.

□□ □

30 □ □□□ □□ □□ □□ □□ □□ □□ □□

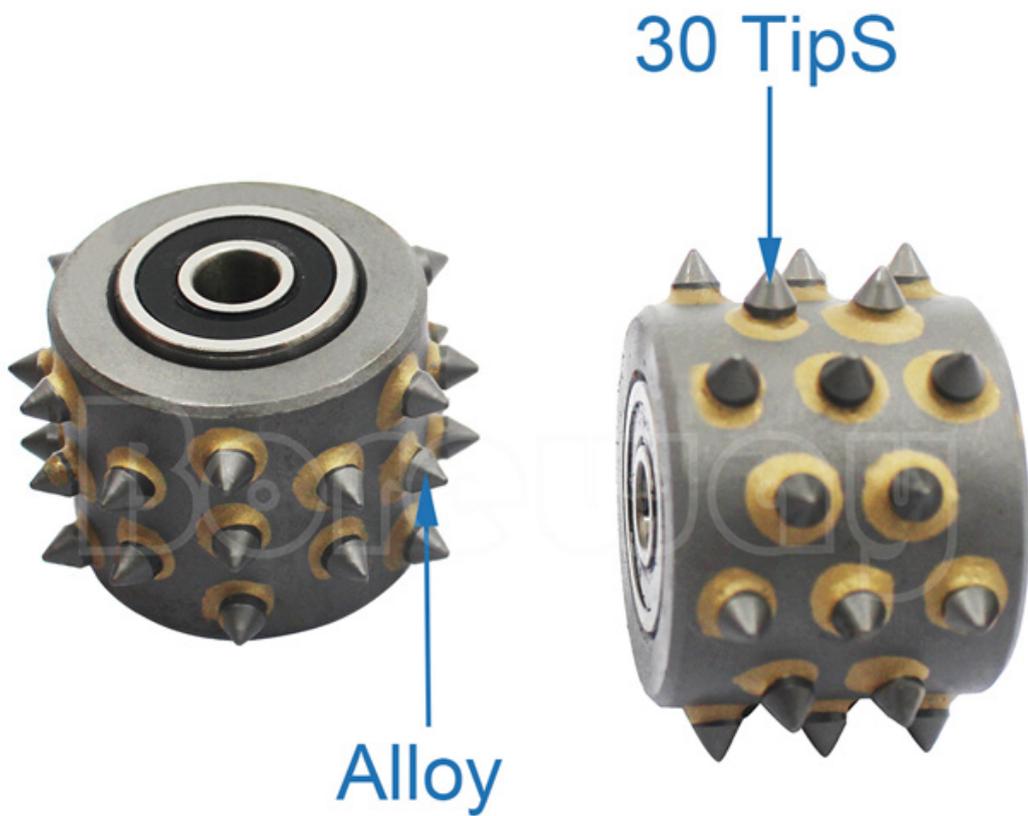

## Litchi Surface Grinding Head

□□□□□□:

□□ □ □□ □□, □□ □□□□□ □ □ □□ □□ □□.



3. 如何 选择 物流 服务商?

如何 选择 物流 服务商 需要考虑 哪些 因素 呢?



地址:

Fujian Nanan *boreway* Machinery Co.,Ltd.

No.605 Huahui Center, Shuitou 362342 Quanzhou, Fujian, China.

: (+86) 595-86990206 / :(+86) 595-86990220

/ **WhatsApp / Wechat** :(+ 86) 18650679939

: **boreway@boreway.com.**

**Lyon Chang.**