



115mm 4.5



115mm

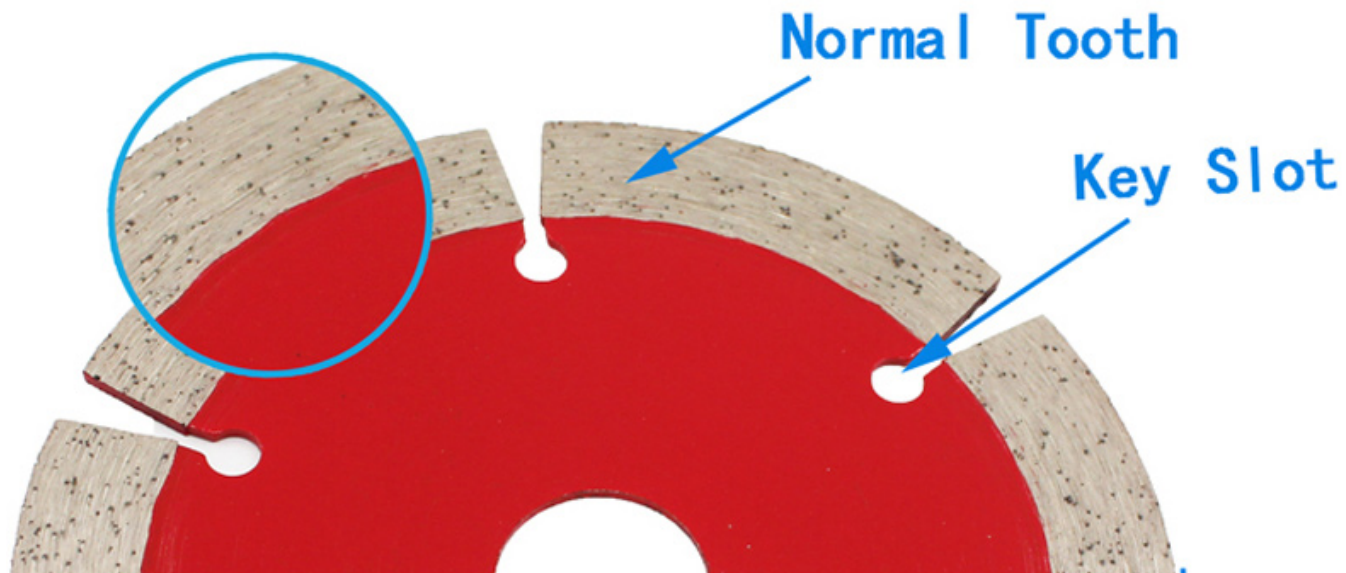

1. Use good quality bonding agent
2. Use High grade diamond





1. 115mm

2.


3. 1

= OEM

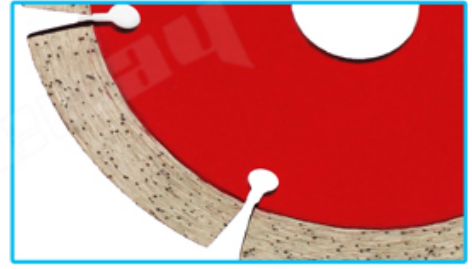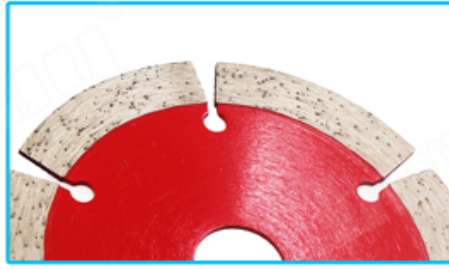


115mm

4.3	110	32.3	6/8/9	8/10/12	4	105		35	6/8	8/10/12
4.5	115	38.5	8	8/10/12						
5	125	37.5	9	8/10/12						
6	150	33.5	12	8/10/12						
7	180	35	14	8/10/12						
8	200	39.2	14	8/10/12						
9	230	34.4	18	8/10/12						

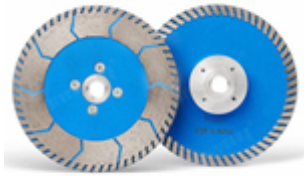


Boreway Machinery Co., Ltd
www.diamondtools.top
www.boreway.net

5

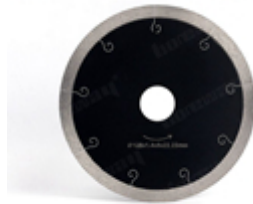

Boreway Machinery Co., Ltd
www.diamondtools.top
www.boreway.net

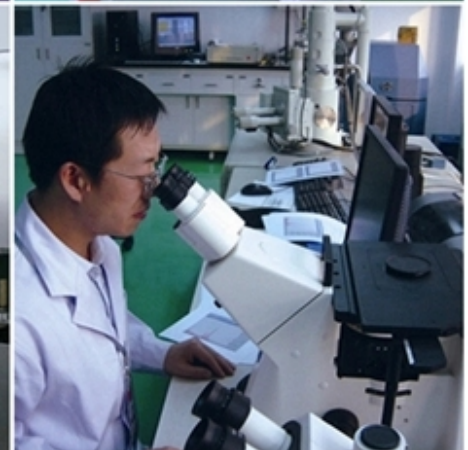



□□&□□□

PS□

1.□□□□□□□□□□□□□□□□

□□□□□□2.Air / Sea□□□□□□/□□□□□□

3.45kg□□□□□□□□□□□□□□□□□□□□

4.□□□□□□□□□□□□□□□□□□□□□□

